




ASTRELIGHTS INC

Specification of Wall Pack with glass cover

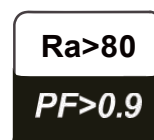




ASTRELIGHTS INC

A variety of drivers are available

Using an isolated, 0-10V dimmable.


Protection level: Wet Location

The wall pack is sealed by silicone ring that can avoid dust completely and be waterproof, also the internal level ensures that the installation is horizontal.

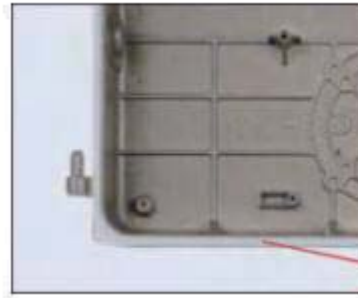

silicone ring

Product Dimension

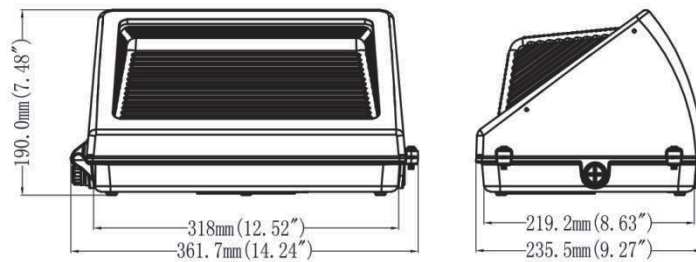

Input Voltage: 120-277Vac
Model:

ALI-WP11GM-100W-L2-TCP(XX)

TCP represents adjusting the CCT & Power
(XX) represents sensor, may be PT=Photocell; MS=motion sensor;
Blank= without photocell and motion sensor.




ASTRELIGHTS INC

Lighting Parameters ■ ■ ■

Power	60W/80W/100W
Rate Current	0.55/0.73/0.92A
Working Voltage	120-277Vac
Beam Angle	70*110°
Color Temperature	4000K/5000K
lamp's Luminous Efficiency	> 120lm/W
Color Rendering Index	Ra > 80
Operating Temperature	-40°F ~ + 104°F
Storage Temperature	-40°F ~ + 158°F
Environment Location	Wet Location
Life-span	50000H
Materials	≥ADC12
The color of the lamp shell	Brown
Mounting	Bracket fixed

Optical Properties ■ ■ ■

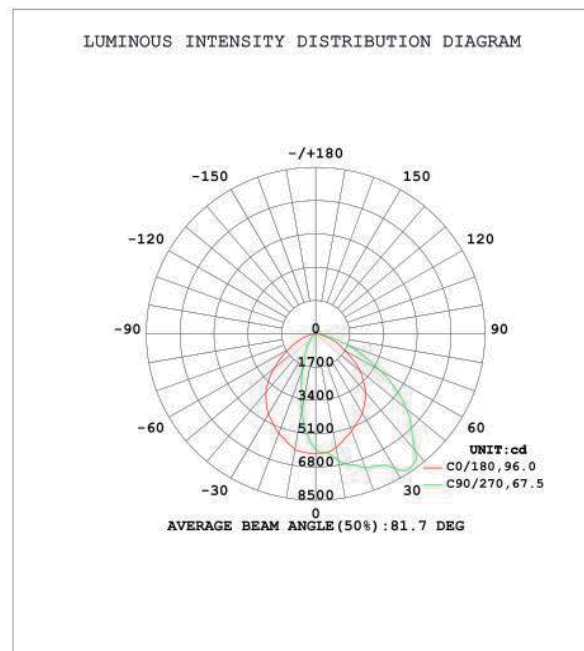




ASTRELIGHTS INC


Installation Instruction

1. Instructions for CCT & Wattage Selectable 2nd Gen. WallPack with glass cover (with Pre-built Photocell).


1. Unscrew with a screwdriver to remove the fixture upper part.

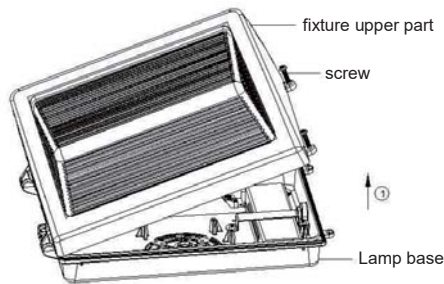

2. Open the bottom case, set up CCT and wattage through internal DIP switches according to the markings. the default CCT, dial up to 5000K, dial down to 4000K; The default wattage position (centre) is 80W, dial up to 60W, dial down to 100W, dial centre to 80W. Users can dial to positions of required CCT and wattage.

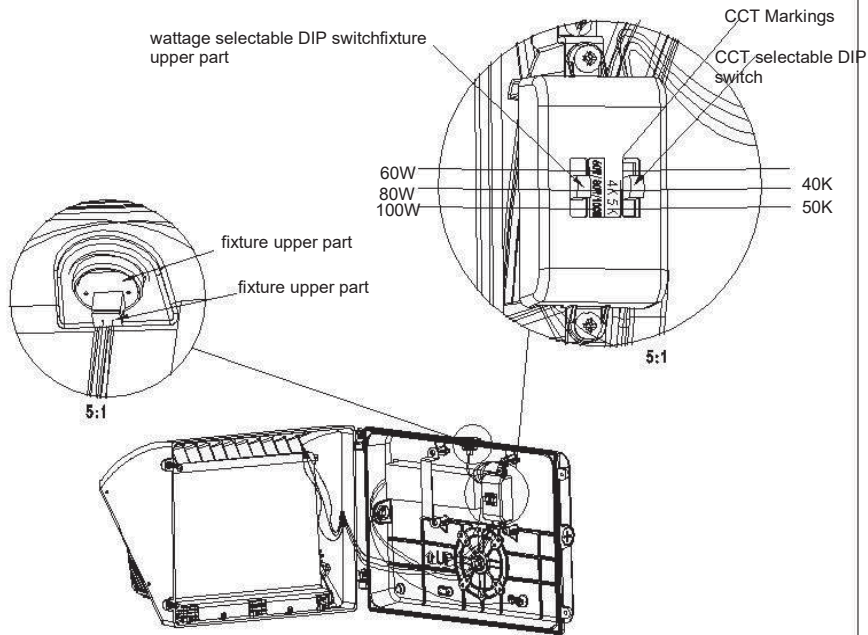


3. After selecting the CCT and wattage, lock the upper part by tightening screws into bottom case for the end.

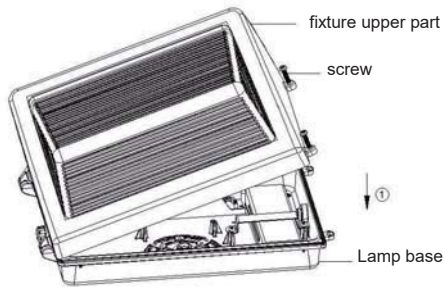


2. Instructions for CCT & Wattage Selectable 2nd Gen. WallPack with glass cover (with DIY Photocell).

1. Unscrew with a screwdriver to remove the fixture upper part.

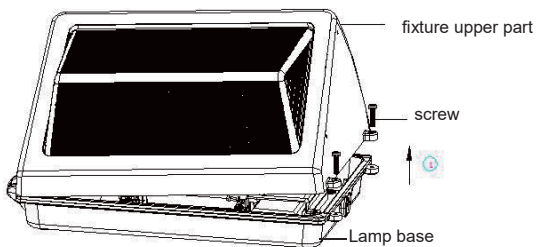


2. Unscrew the brown cap in the side of base with a slot type screwdriver.

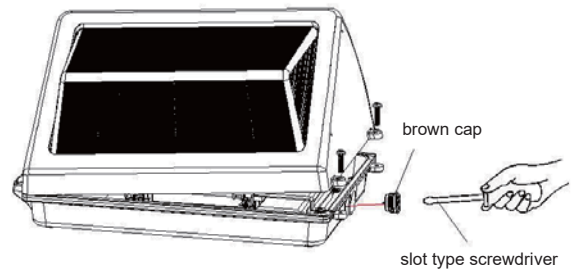




ASTRELIGHTS INC


3. Screw transparent photocell into the side of base with a slot type screwdriver.

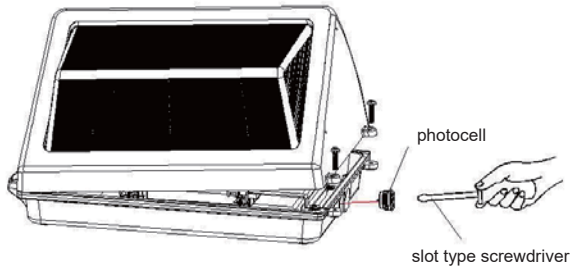


4. Open the bottom case; insert the male plug connector from driver to photocell's mating connector.

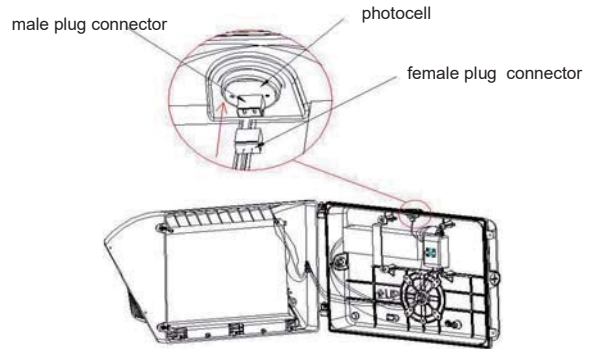

5. After connecting the light sensor, set the CCT and power value through the internal dial switch (internal DIP switches). According to the label, the default CCT, dial up to 5000K, dial down to 4000K; The default power switch is 80W, dial upward to position 60W, dial downward to 100W, and dial to 80W in the middle; users can dial to the desired CCT and power value.

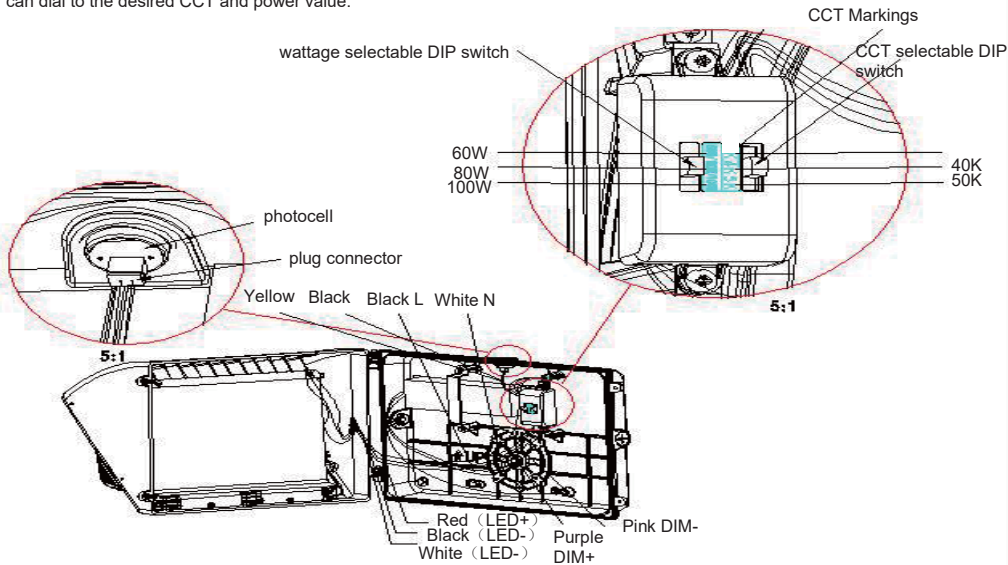

6. After selecting the CCT and wattage, lock the upper part by tightening screws into bottom case for the end.

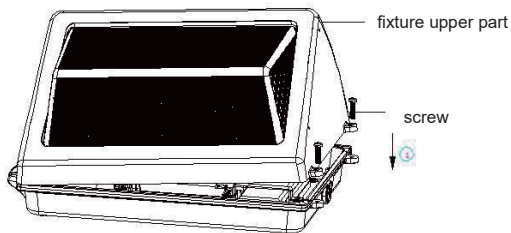





ASTRELIGHTS INC

Installation Instruction


1. Use a screwdriver to unscrew the lamp screws and remove the upper half of the fixture.

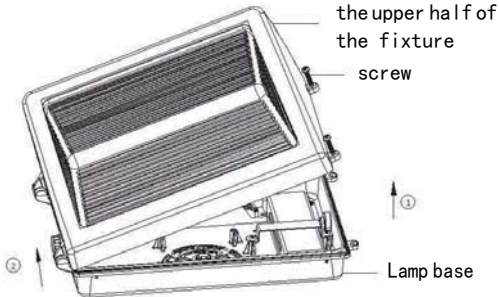


2. Unscrew the cover of the entry hole on the lamp base and remove the cover.

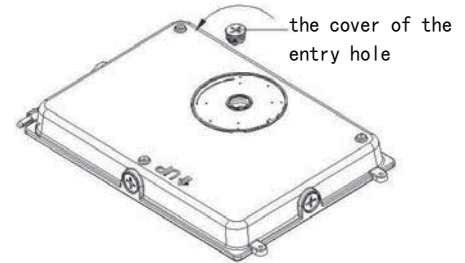


3. According to the embedded terminal box, punch the corresponding mounting hole on the light's mount.

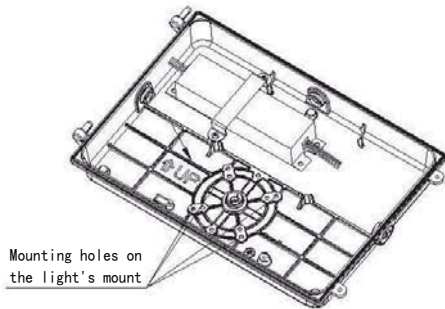


4. Put the input line in the embedded box passes through the waterproof pad and then passed through the lamp base.

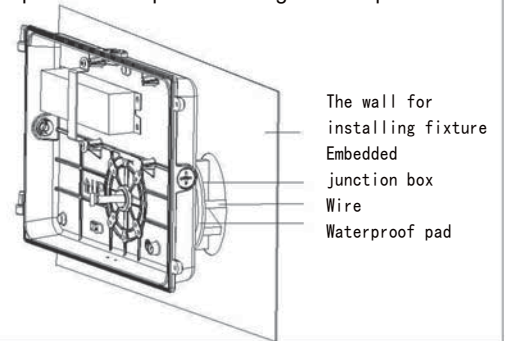

5. Use screw to lock the lamp base on the embedded junction box.

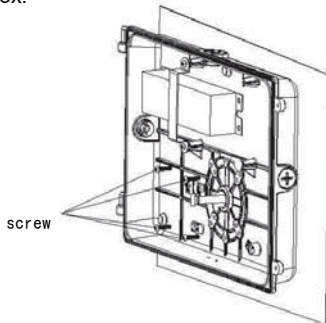


6. Connect the input wire and the dimming wire of the light, then put the connected wires into the embedded terminal box.

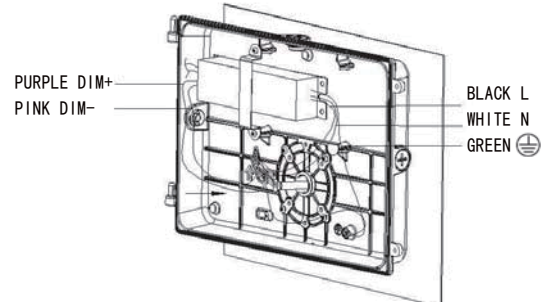


7. Connect the output wires of driver with the wires of PCB board.

Connector
RED (LED+)
BLACK (LED-)

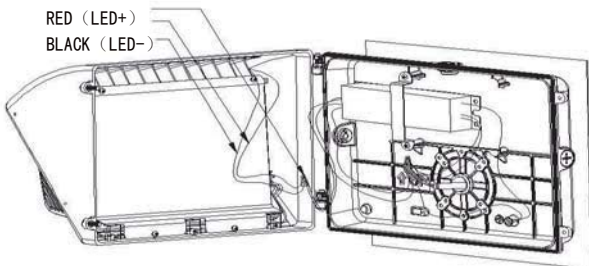

8. Use screws to lock the fixture. Fill the silicone sealant to the gap between fixture and wall-surface, where the fixture attached. (Silicone sealant must be prepared by yourself). Installation completed.

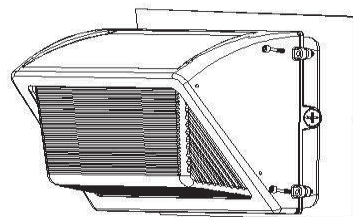



ASTRELIGHTS INC

Applications



Packing /weight

Model	Outer box (L*W*H)	Qty/Ctn (pcs)	N.W/Ctn (lbs/kg)	G.W/Ctn (lbs/kg)	Remarks
ALI-WP11GM-100W	15.55'' * 11.22'' * 9.45'' 395*285*240mm	1	8.82/4.0	10.14/4.6	0.15M cable

Safety Information

- 1、 Using the standard working voltage: AC120~277V, 50/60Hz, do not exceed.
- 2、 Be sure the power supply is turned off before installation.
- 3、 Switch off power of the mains supply or the connection lead respectively before doing any works.
- 4、 Please note waterproof, dustproof, electricity prevention and shockproof for the external power wires.
- 5、 Directly fix bolts on the installation stem through the hole on the mounting bracket.
- 6、 Be sure the connection between the wires is in good condition when install the lamps, beware of leakage.
- 7、 Please read the specification carefully before installation.
- 8、 The complete installation must be handled by an electrical expert